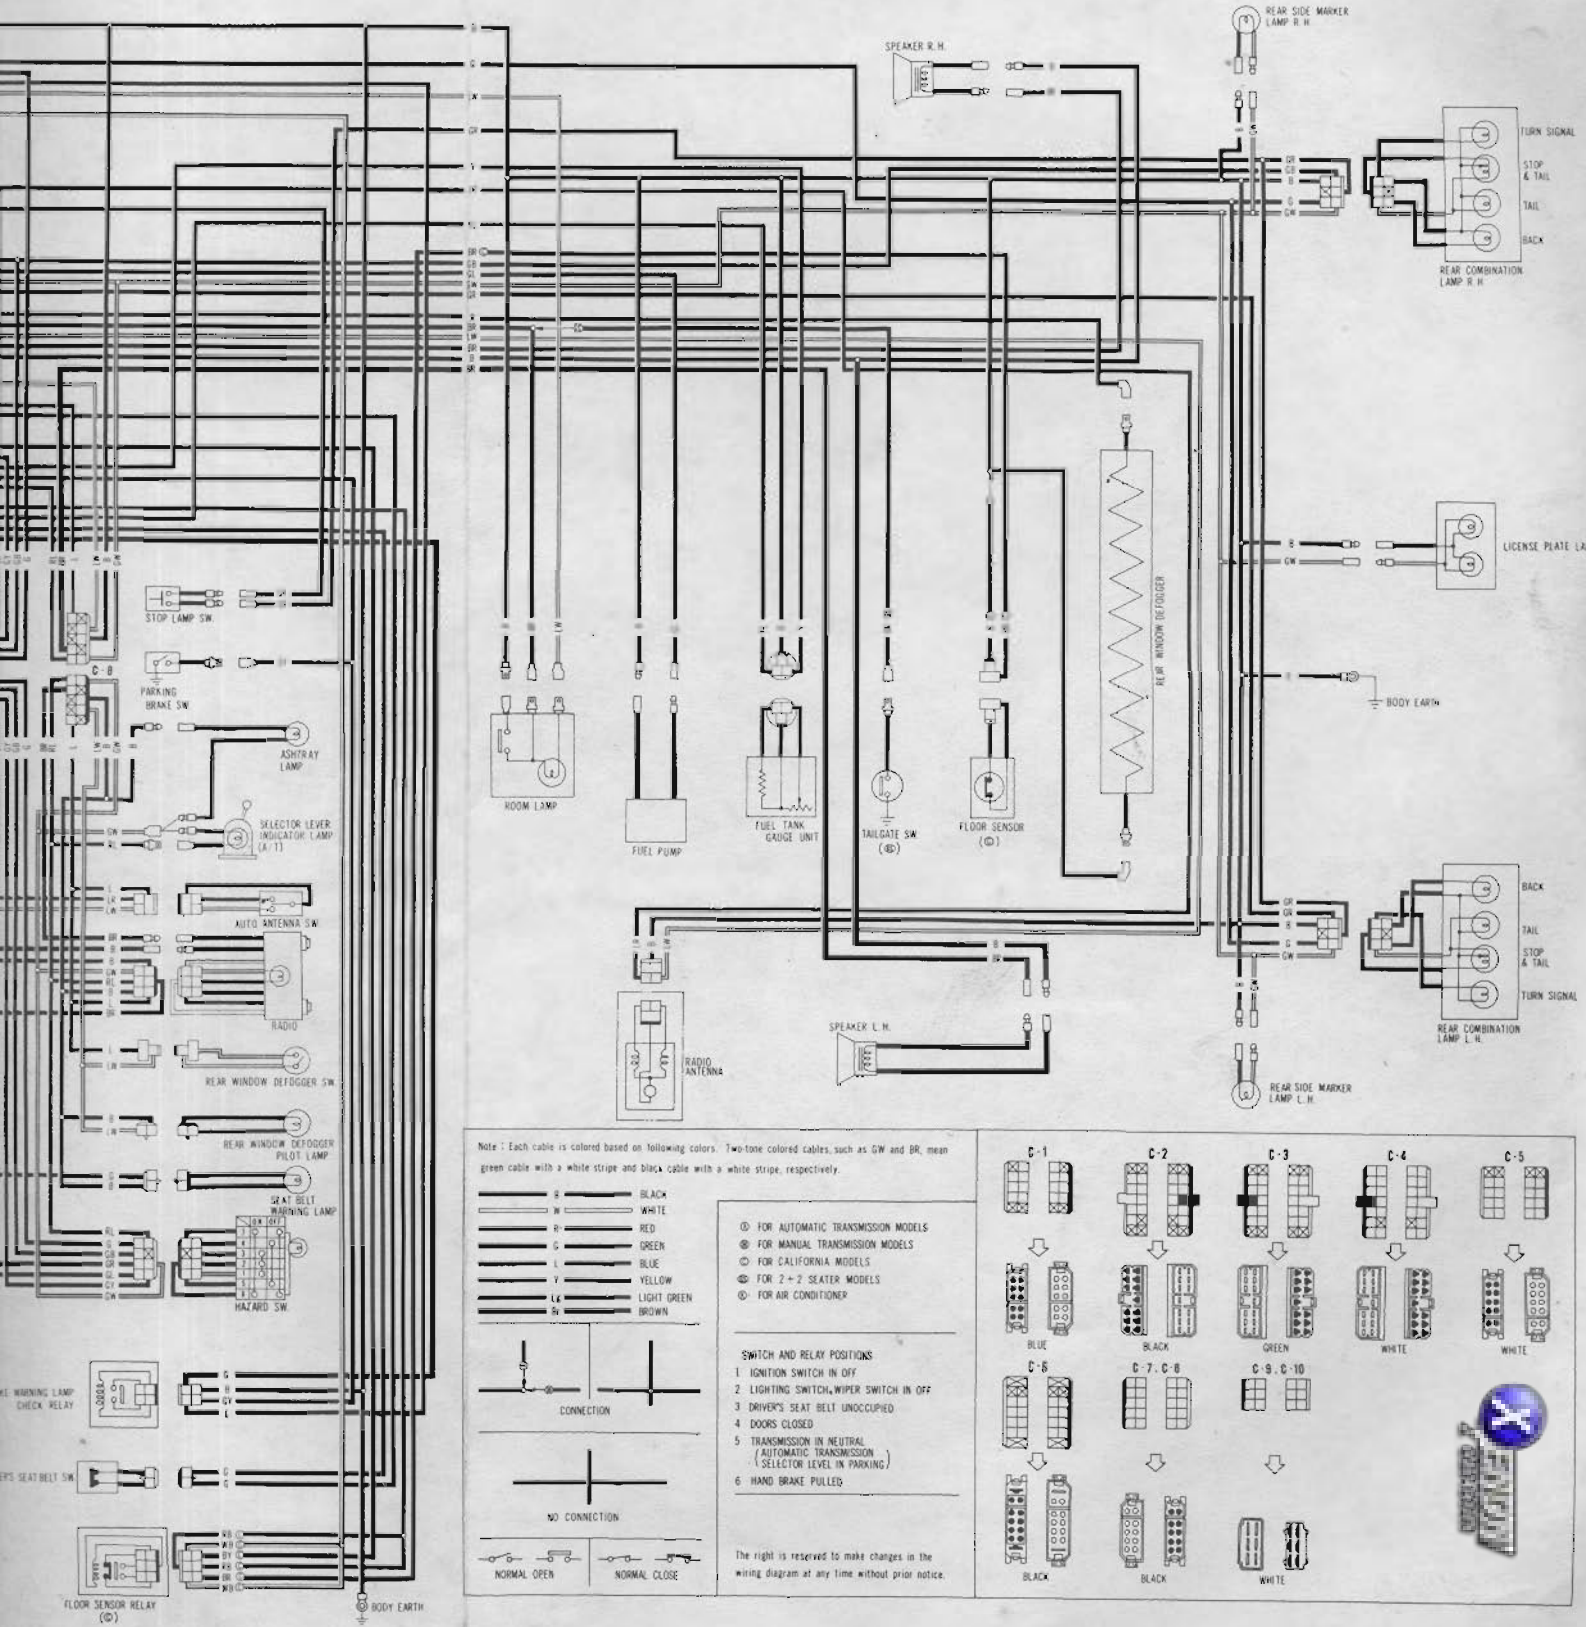


Note : Each cable is colored based on following colors. Two-tone colored cables, such as GW and BR, mean green cable with a white stripe and black cable with a white stripe, respectively.

B	BLACK
W	WHITE
R	RED
G	GREEN
L	BLUE
Y	YELLOW
Lg	LIGHT GREEN
Br	BROWN

CONNECTION

NO CONNECTION


NORMAL OPEN | NORMAL CLOSE


Ⓐ FOR AUTOMATIC TRANSMISSION MODELS
Ⓜ FOR MANUAL TRANSMISSION MODELS
Ⓒ FOR CALIFORNIA MODELS
2+2 FOR 2+2 SEATER MODELS
Ⓐ FOR AIR CONDITIONER


SWITCH AND RELAY POSITIONS
1 IGNITION SWITCH IN OFF
2 LIGHTING SWITCH, WIPER SWITCH IN OFF
3 DRIVER'S SEAT BELT UNOCCUPIED
4 DOORS CLOSED
5 TRANSMISSION IN NEUTRAL (AUTOMATIC TRANSMISSION SELECTOR LEVEL IN PARKING)
6 HAND BRAKE PULLED

The right is reserved to make changes in the wiring diagram at any time without prior notice.

WIRING DIAGRAM

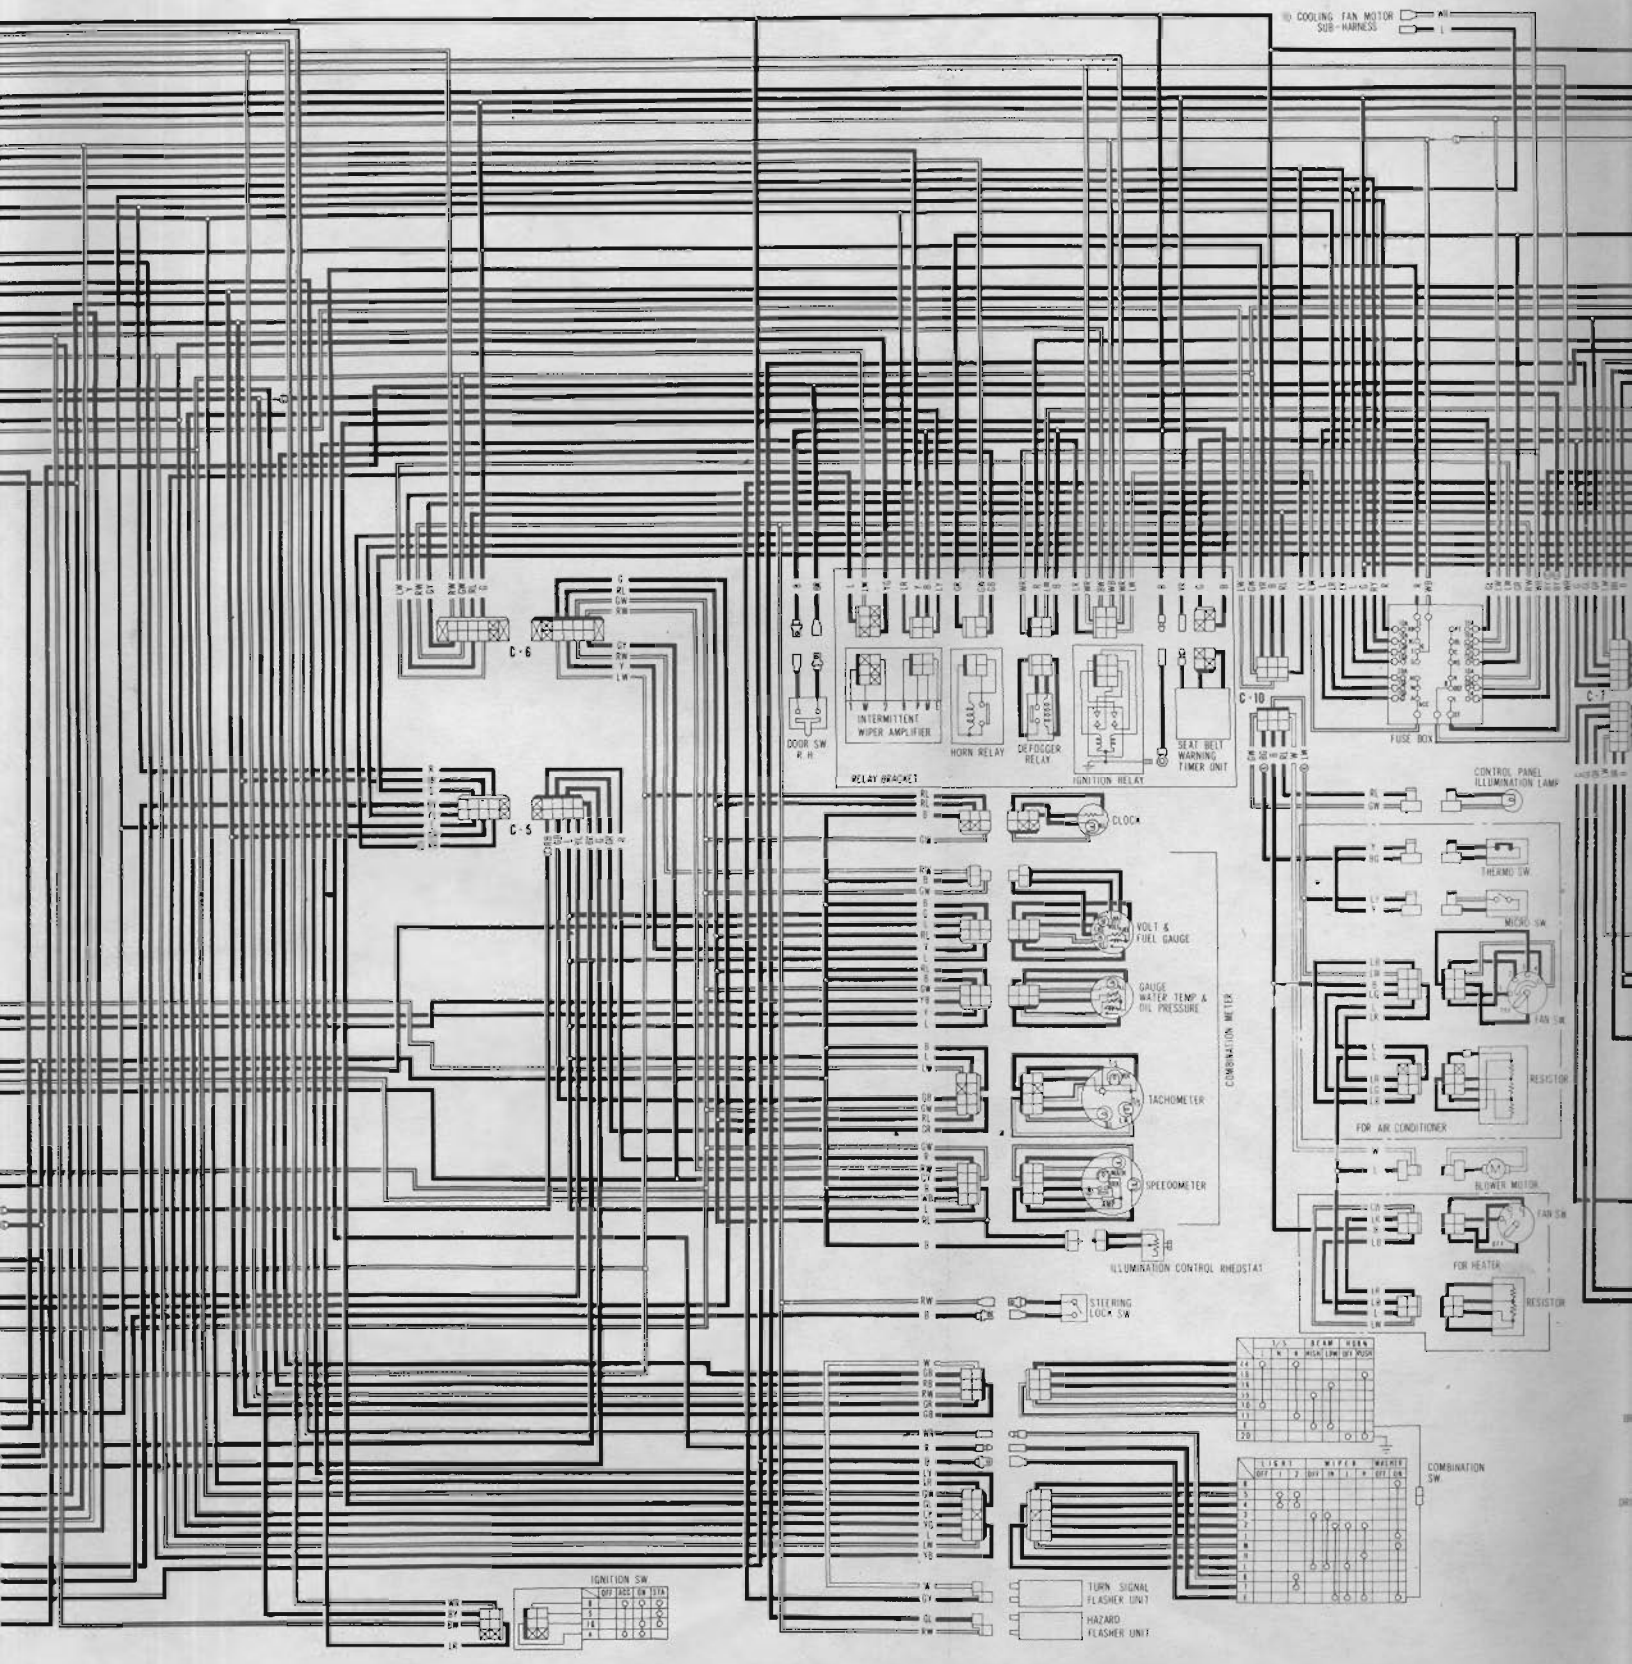

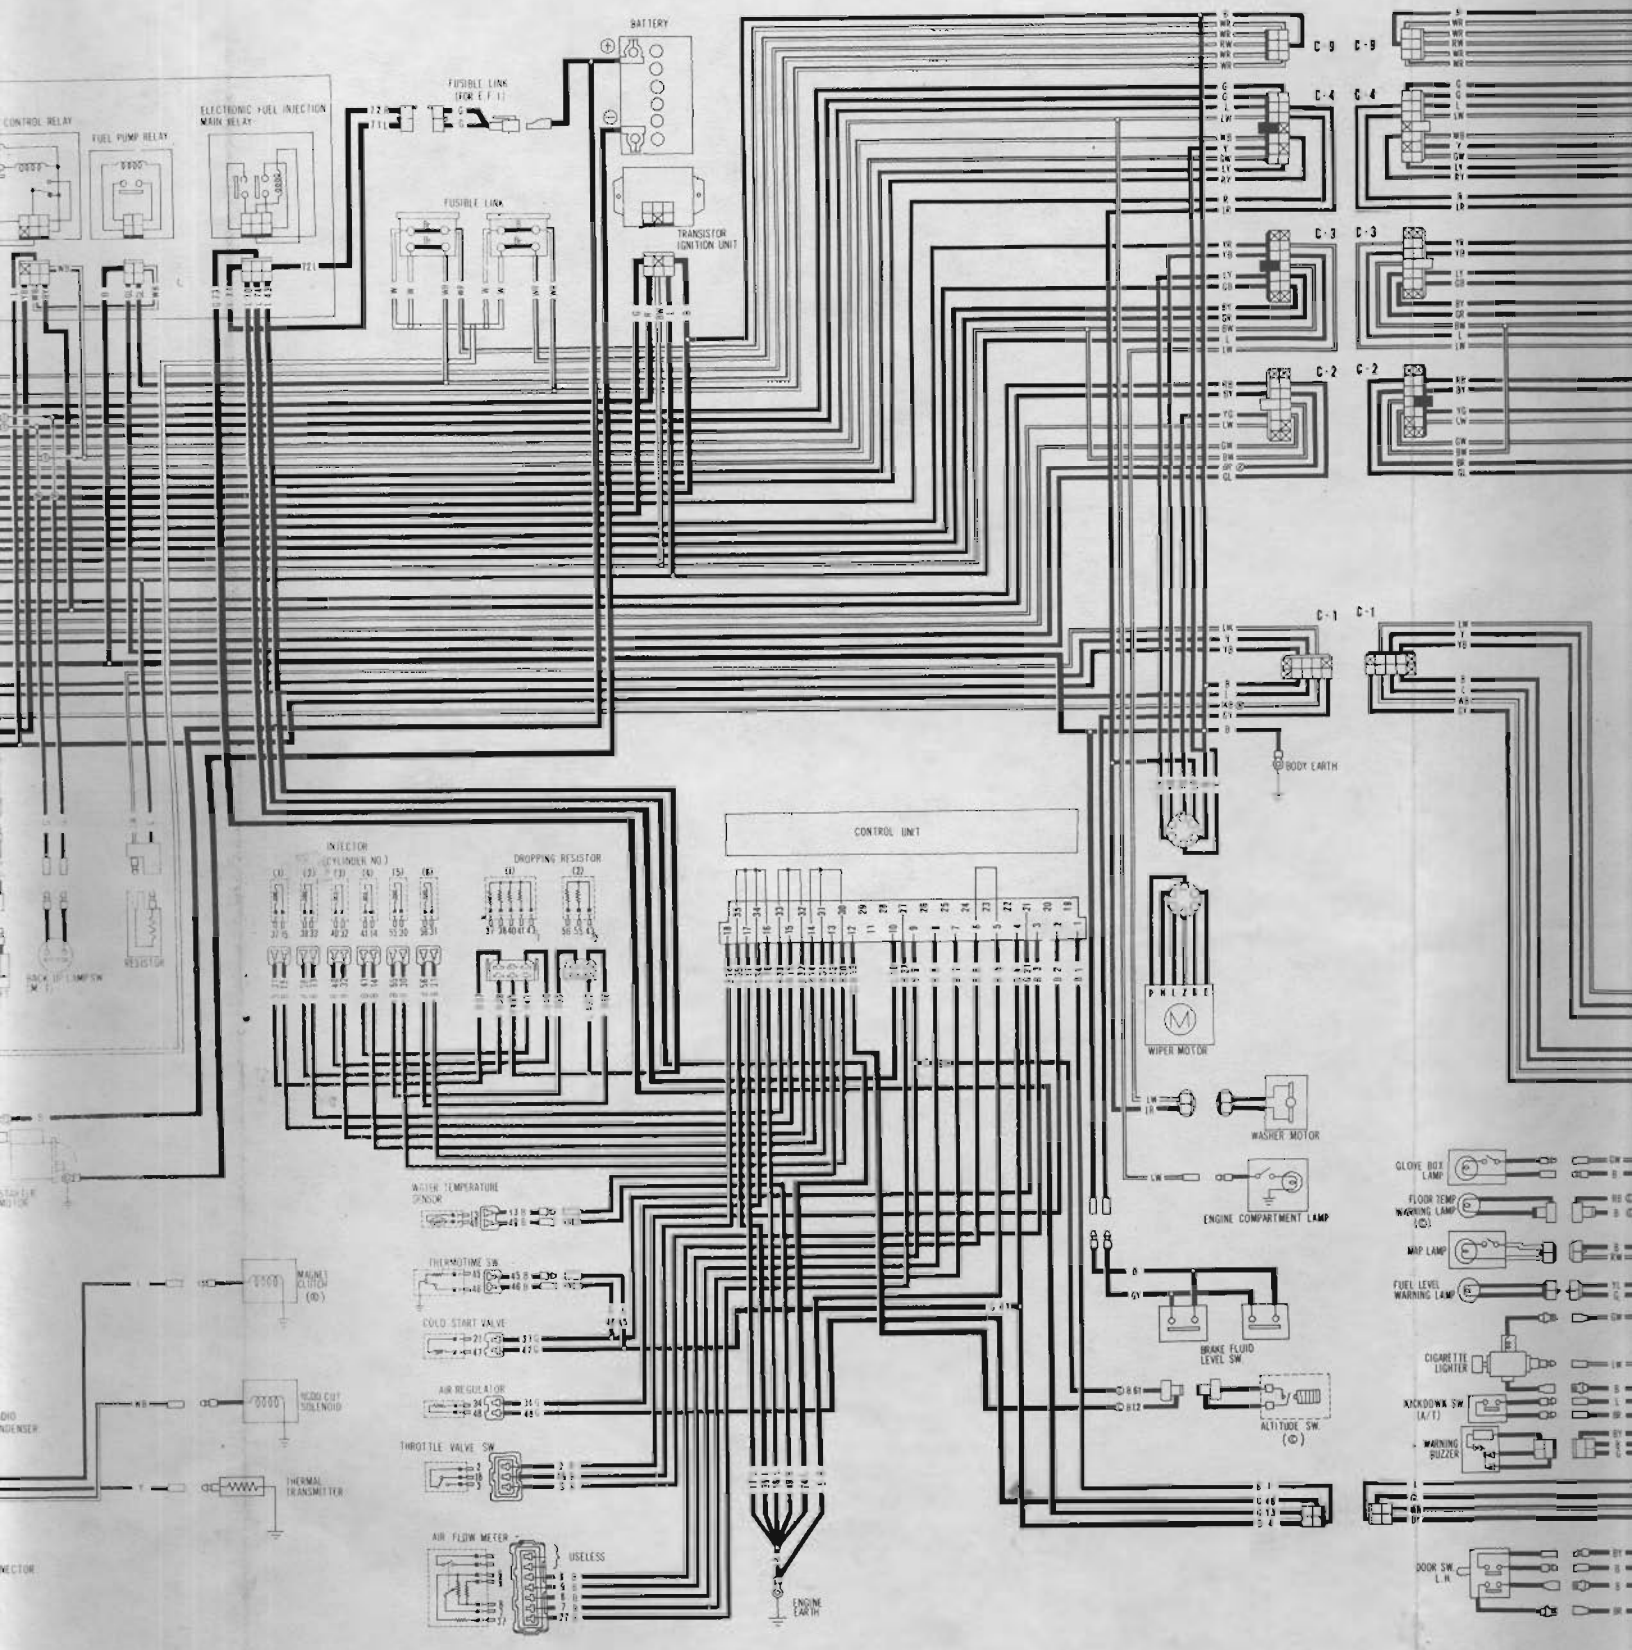
BATTERY
FUSIBLE LINK (FOR E.F.I.)
FUSIBLE LINK
TRANSISTOR IGNITION UNIT
CONTROL RELAY
FUEL PUMP RELAY
ELECTRONIC FUEL INJECTION MAIN RELAY
C-9
C-4
C-3
C-2
C-1
BODY EARTH
CONTROL UNIT
INJECTOR (CYLINDER NO.)
DROPPING RESISTOR
RESISTOR
BACK UP LAMP SW.
WIPER MOTOR
WASHER MOTOR
ENGINE COMPARTMENT LAMP
WATER TEMPERATURE SENSOR
THERMOTIME SW.
COLD START VALVE
AIR REGULATOR
THROTTLE VALVE SW.
AIR FLOW METER
USELESS
ENGINE EARTH
MAGNET CLUTCH
HI-IDLE CUT SOLENOID
THERMAL TRANSMITTER
BRAKE FLUID LEVEL SW.
ALTITUDE SW.
GLOVE BOX LAMP
FLOOR TEMP WARNING LAMP
MAP LAMP
FUEL LEVEL WARNING LAMP
CIGARETTE LIGHTER
KICKDOWN SW. (A/T)
WARNING BUZZER
DOOR SW. L.H.

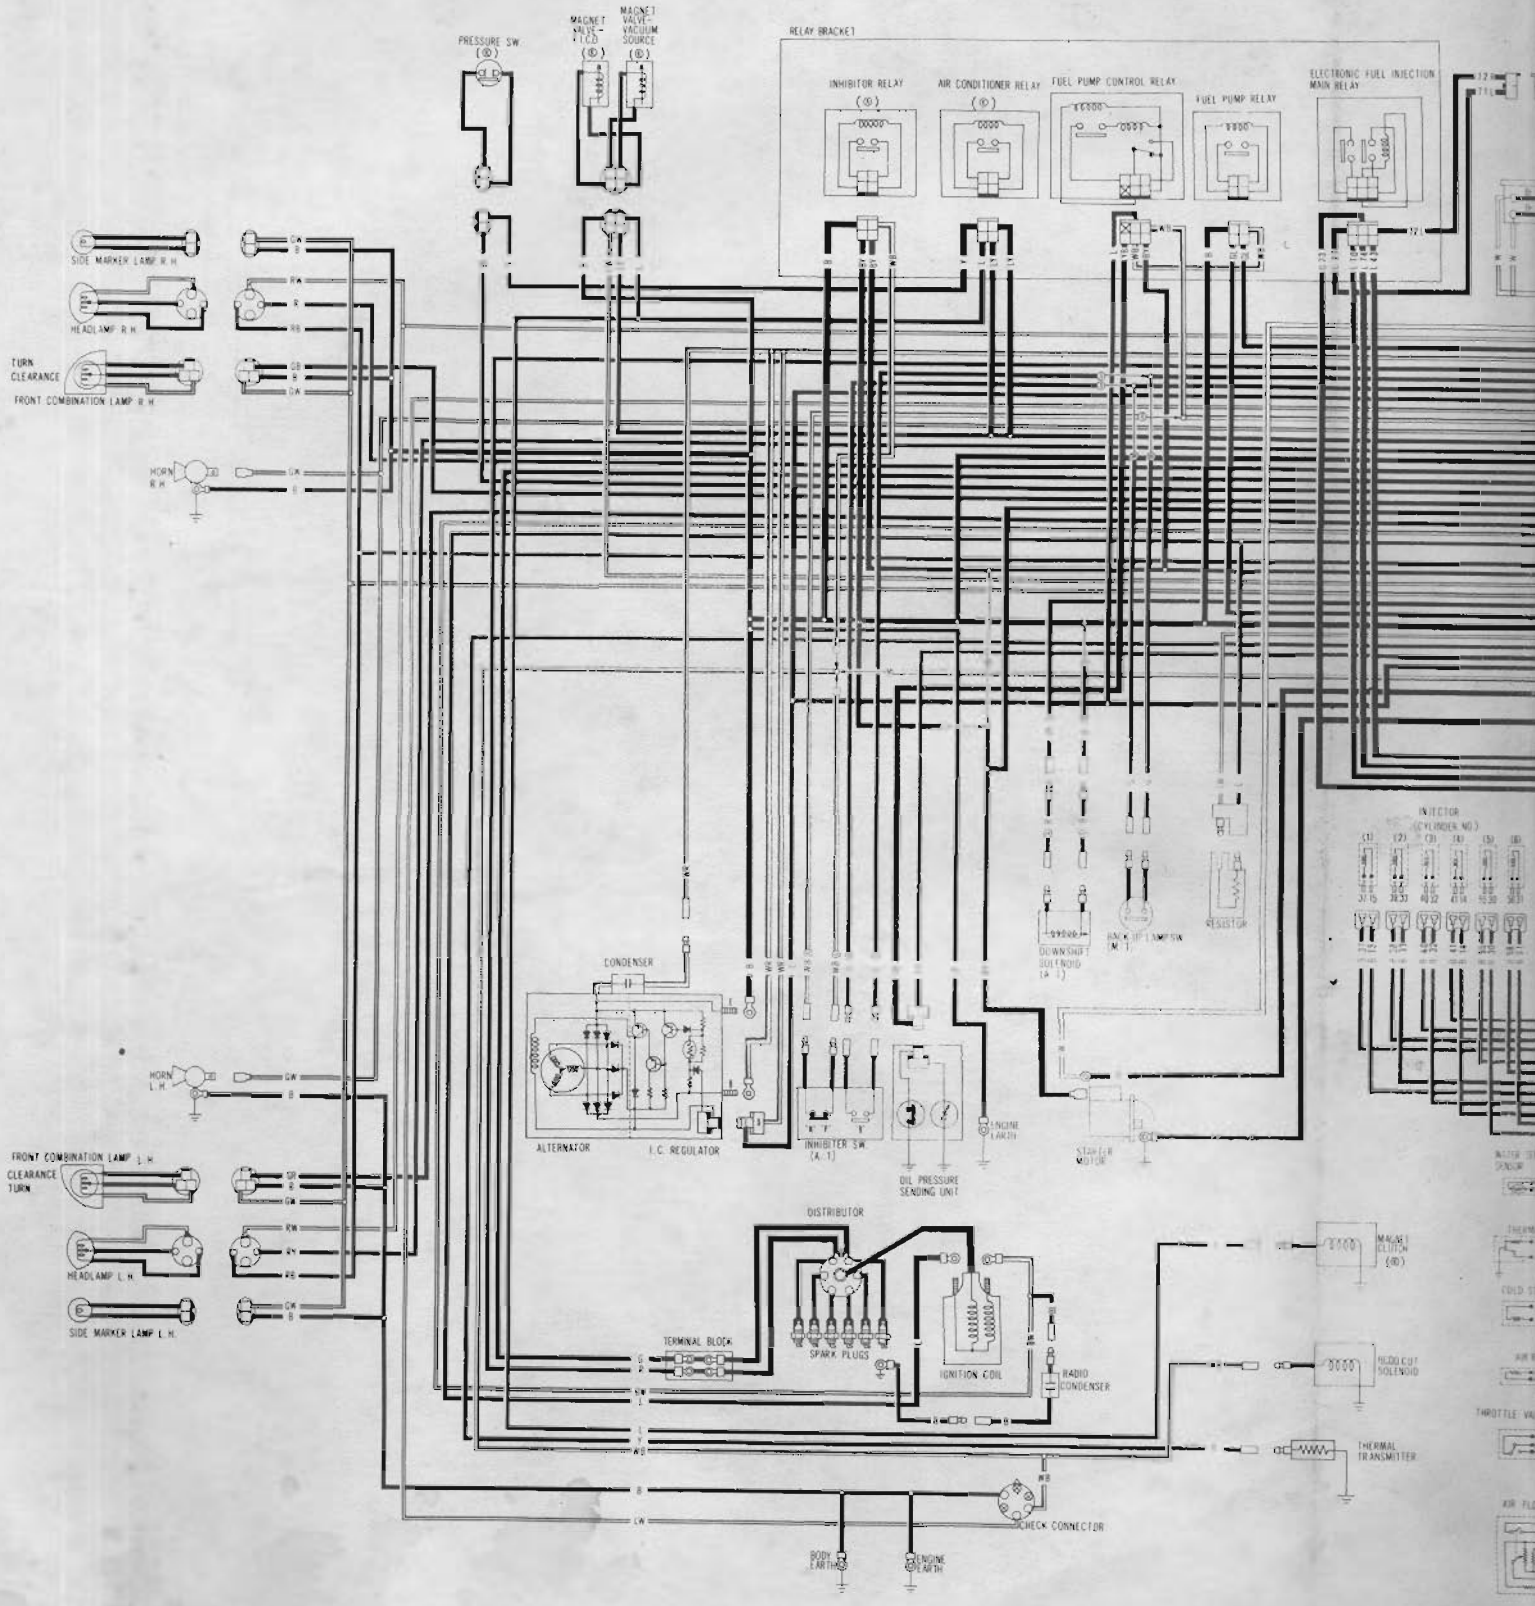
PRESSURE SW.
MAGNET VALVE-T.C.D.
MAGNET VALVE-VACUUM SOURCE
RELAY BRACKET
INHIBITOR RELAY
AIR CONDITIONER RELAY
FUEL PUMP CONTROL RELAY
FUEL PUMP RELAY
ELECTRONIC FUEL INJECTION MAIN RELAY
SIDE MARKER LAMP R.H.
HEADLAMP R.H.
TURN
CLEARANCE
FRONT COMBINATION LAMP R.H.
HORN R.H.
HORN L.H.
FRONT COMBINATION LAMP L.H.
CLEARANCE
TURN
HEADLAMP L.H.
SIDE MARKER LAMP L.H.
CONDENSER
ALTERNATOR
I.C. REGULATOR
INHIBITER SW. (A.T.)
OIL PRESSURE SENDING UNIT
ENGINE EARTH
STARTER MOTOR
DOWNSHIFT SOLENOID (A.T.)
BACK UP LAMP SW. (M.T.)
RESISTOR
INJECTOR
(CYLINDER NO.)
DISTRIBUTOR
SPARK PLUGS
IGNITION COIL
RADIO CONDENSER
TERMINAL BLOCK
MAGNET CLUTCH
HOT CUT SOLENOID
THERMAL TRANSMITTER
CHECK CONNECTOR
BODY EARTH
ENGINE EARTH